



No. K353

ZIPPY

ALL PURPOSE CUTTER

To REMOVE BLADE:

PRESS DOWN ON GRID BUTTON AND PUSH UP TO EJECT BLADE.

To INSERT BLADE:

SLIP A STANDARD DOUBLE EDGE RAZOR BLADE INTO SLOT ON TOP OF "ZIPPY" MAKING SURE BLADE GOES UNDER EJECT BUTTON.

NOTE:

ALL FOUR CORNERS OF RAZOR BLADES CAN BE UTILIZED FOR EXTENDED USE.

REPLACEMENT BLADES AVAILABLE - No. R53B (dz.)

**BLADE IS EXTREMELY SHARP. USE WITH CAUTION.
DO NOT PERMIT CHILDREN TO REPLACE CUTTING BLADES**

ALVIN & CO., INC.
BLOOMFIELD, CT
GRAND PRAIRIE, TX

MADE IN CHINA
FABRIQUÉ À LA CHINE
HECHO EN CHINA

A97000 05/06