




# Rack & Go™ Mobile Cart


## Assembly Instructions

For model WRASB


### Parts Included:

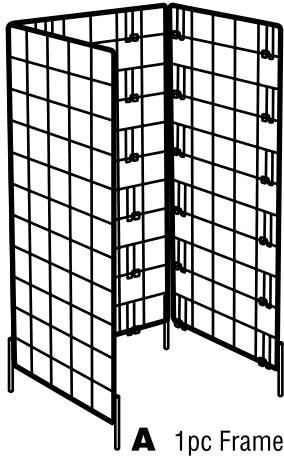


**A** 1pc Frame

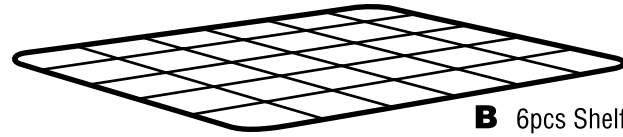

**B** 6pcs Shelf

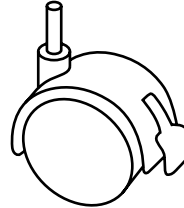

**C** 2pcs Locking Caster

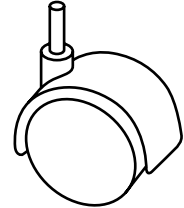


**D** 2pcs Non-Locking Caster

### 60-Second Assembly:

Unfold Frame (**A**) and turn upside down.


Locate two locking casters (**C**). Insert the locking casters into the open end of side frame (not the corners) by screwing into threaded tube. Tighten nut snugly, but do not over-tighten.

Insert the non-locking casters (**D**) into the back corners the same way.

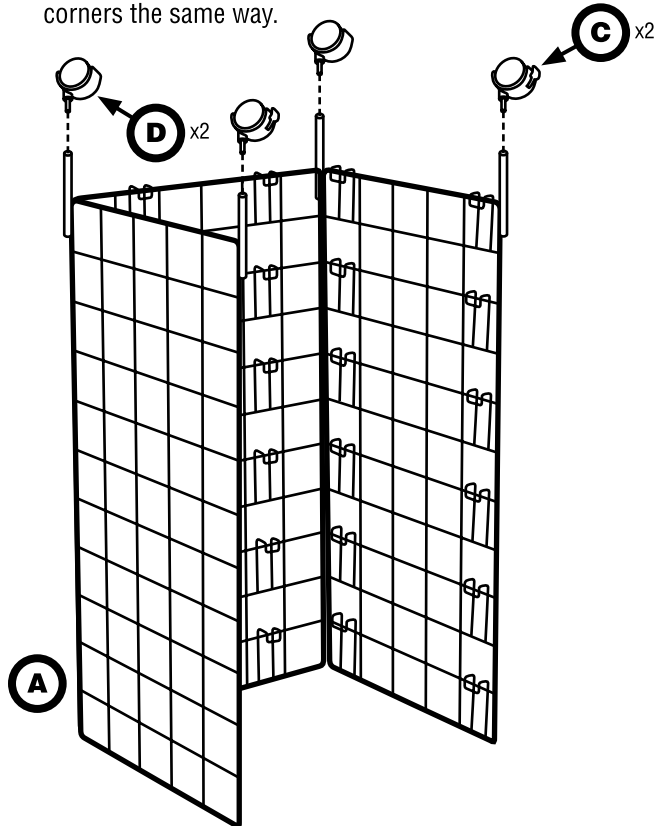

Turn frame upright.

Turn Shelves (**B**) so that the welds on the edges are facing up as shown below.

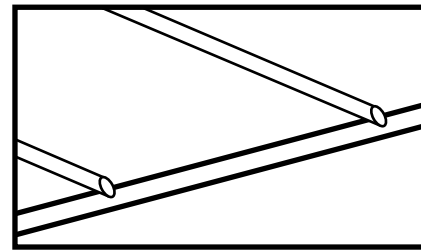

Insert Shelves (**B**) by snapping into frame hooks, starting with the bottom shelf and working up.

