
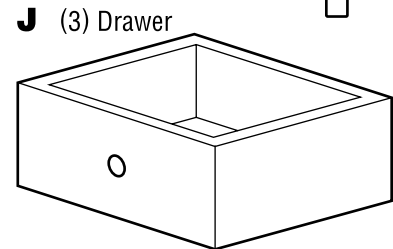
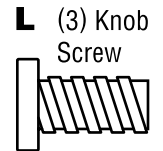
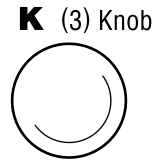
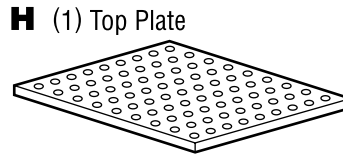

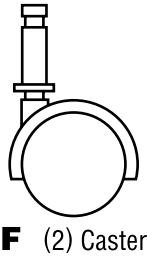

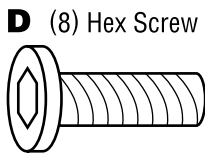




Tools Required: Hex wrench (included)

Parts Included:

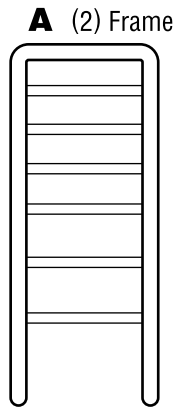

To Assemble:

- 1** Make sure drawer rails on frames (**A**) are facing each other. Snap locking casters (**G**) into same end of each frame. Snap non-locking casters (**F**) into frames.
- 2** Attach four crossbars (**B**) to one frame using the four crossbar spacers (**C**) and four hex screws (**D**). Make sure curved side of spacers face frame. Do not fully tighten screws yet. Attach second frame to four crossbars following instructions above.
- 3** Snap on top plate (**H**) and adjust frame to make sure it is square. Fully tighten all eight hex screws, alternating from side to side to assure the frame remains square.
- 4** Attach three knobs (**K**) to three drawers (**J**) with three knob screws (**L**).
- 5** Insert drawers into rails.

