



**Tools Required:** Hex wrench (included)

**Parts Included:**


**A** (2) Frame

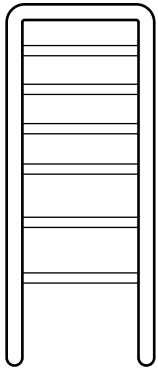


**B** (4) Crossbar




**C** (8) Crossbar Spacer




**D** (8) Hex Screw

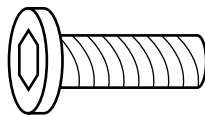


**E** (1) Hex Wrench

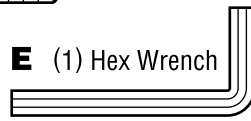


**F** (2) Caster

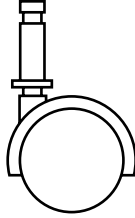


**G** (2) Locking Caster

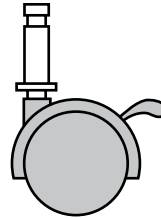


**H** (1) Top Plate

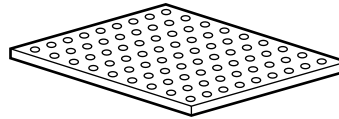


**J** (4) Drawer

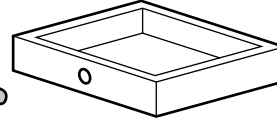


**L** (6) Knob

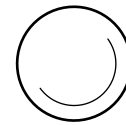

**M** (6) Knob Screw

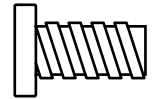

**K** (2) Drawer

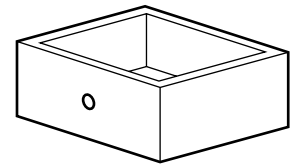

**To Assemble:**

**1** Make sure drawer rails on frames (**A**) are facing each other. Snap locking casters (**G**) into same end of each frame. Snap non-locking casters (**F**) into frames.

**2** Attach four crossbars (**B**) to one frame using the four crossbar spacers (**C**) and four hex screws (**D**). Make sure curved side of spacers face frame. Do not fully tighten screws yet. Attach second frame to four crossbars following instructions as above.

**3** Snap on top plate (**H**) and adjust frame to make sure it is square. Fully tighten all eight hex screws, alternating from side to side to assure the frame remains square.

**4** Attach six knobs (**L**) to six drawers (**J**)(**K**) with six knob screws (**M**).

**5** Insert drawers into rails.

