


Tools Required: Hex wrench (included)

Parts Included:

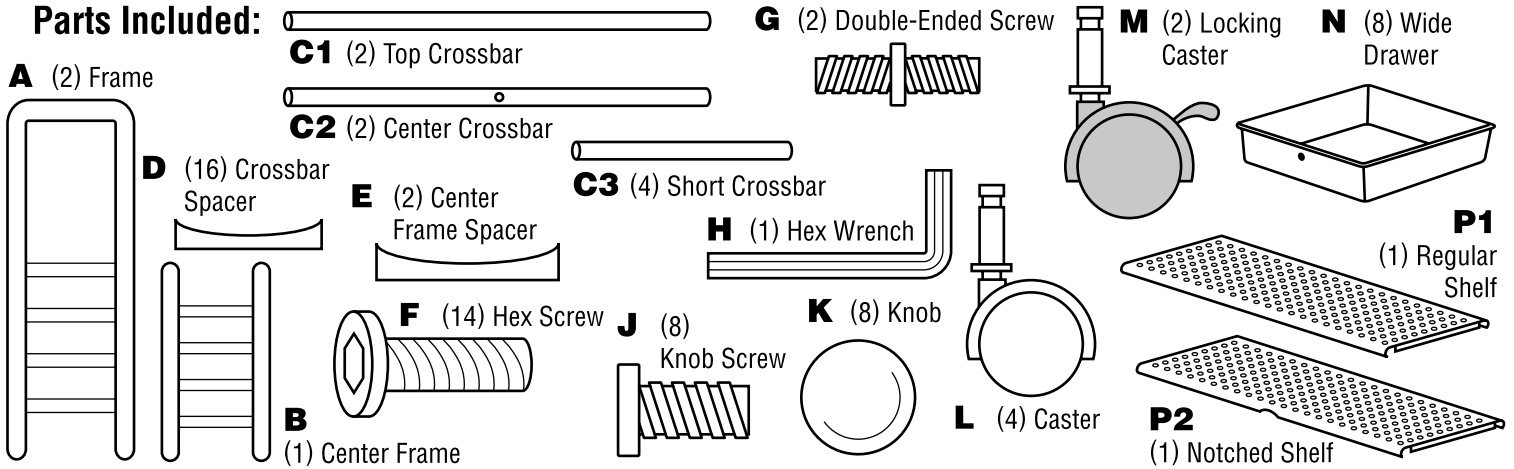

To Assemble:

- Attach two top crossbars (**C1**) to top of frame (**A**), two center crossbars (**C2**) to center of frame, and two short crossbars (**C3**) to bottom of frame using six crossbar spacers (**D**) and six hex screws (**F**). Make sure crossbars are attached to the side of frame with drawer rails. Make sure curved side of spacers face the frame. Do not tighten screws fully yet.

Attach center frame (**B**) to middle of center crossbars using two center frame spacers (**E**) and two hex screws. Make sure curved side of spacers face the crossbar.

Thread one end of double-ended screw (**G**) through a crossbar spacer completely into short crossbar. Attach center frame to double-ended screws using four crossbar spacers.

Attach two short crossbars to double-ended screws.

Attach remaining frame to all six crossbars using six crossbar spacers and six hex screws. Make sure drawer rails face in.
- Snap two locking casters (**M**) into front corners of frame. Snap non-locking casters (**L**) into remaining four frame legs.
- Attach eight knobs (**K**) to eight drawers (**N**) with eight knob screws (**J**). Insert drawers into rails.
- Snap notched shelf (**P2**) onto center crossbars. Snap regular shelf (**P1**) onto top crossbars. Adjust frame to make sure it is square. Fully tighten all 12 hex screws, alternating from side to side to assure the frame remains square.

